

BLUETOOTH KEYBOARD FOR DUALSHOCK®4 WIRELESS CONTROLLER

CONTENTS:

1 x Bluetooth keyboard for use with DUALSHOCK®4 wireless controller

SAFETY INFORMATION:

- Do NOT short circuit or burn.
- The keyboard is NOT a toy.
- Keep dry at all times. Do NOT immerse in liquids.
- For indoor use only.
- Do NOT attempt to disassemble. Unit does not include serviceable parts.
- Avoid dropping, shaking or any hard impacts on the product.


TECHNICAL SUPPORT:

If you encounter a problem, please visit www.numskull.com and click 'Technical Support'. From there you will be able to access the FAQ section and our contact details.

Alternatively you can contact us:

- By email - hello@numskull.com
- UK telephone - 01707 800881
- International telephone - +44 (0)1707 800881

BLUETOOTH KEYBOARD LAYOUT

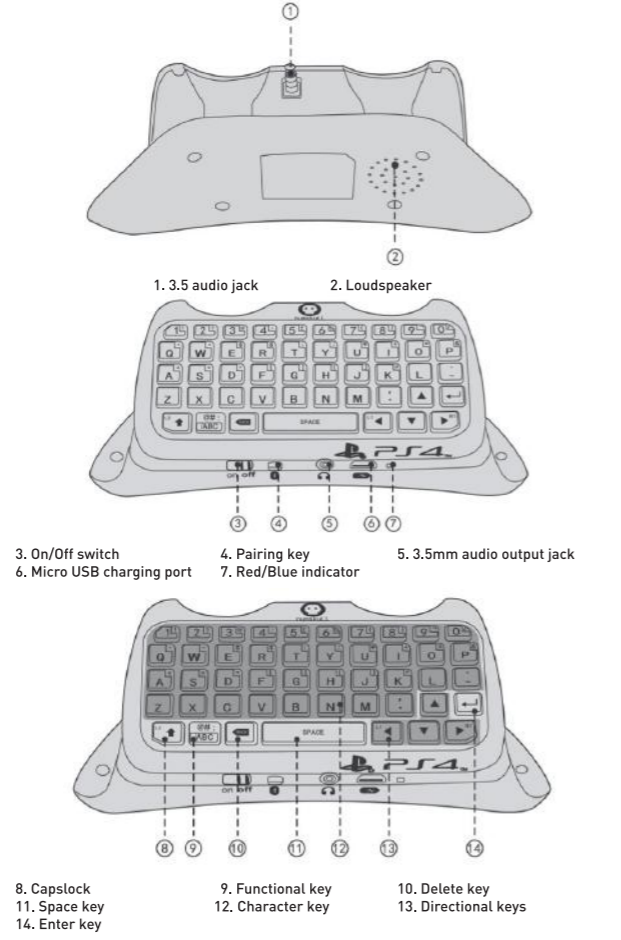

CONNECTION INSTRUCTIONS

INSTRUCTIONS:

1. Connect your Bluetooth keyboard to your DUALSHOCK®4 wireless controller via the controller 3.5mm jack.
2. Turn on your PS4™ system and DUALSHOCK®4 wireless controller.
3. Turn on the keyboard with the On/Off switch - the blue indicator will light up.
4. Press and hold the Pairing Key for 3 seconds to begin pairing the device. The indicator will flash until pairing is complete.
5. On your PS4™ system, go to 'Settings', then 'Devices' then 'Bluetooth Device'.
6. Find the device named 'Numskull Bluetooth Keyboard' and then select to pair.
7. Enter the passkey displayed by your console and then select it to pair with your controller.

OTHER FUNCTIONS:

1. To type the symbols in pink, press and hold and the corresponding symbol key.
2. To type capital letters, press one and then the letter. Press this key to unlock this function.

ADDITIONAL NOTES:

1. When the indicator flashes twice in blue this means the keyboard needs charging. Connect any micro USB charging cable (not included) to charge the device – the indicator turns red when charging and turns off once fully charged.
2. The Bluetooth pairing mode will stay active for 3 minutes.
3. When the Bluetooth connection is lost the keyboard will go into sleep mode. To deactivate sleep mode simply press any key within the effective Bluetooth range.
4. The keyboard should be paired automatically with the PS4™ console after the first pairing. If the re-connection fails, please follow the connection instructions to pair again.
5. In the PS4™console setting (Setting -> Device -> Audio Devices -> Input Device -> Headset Connected to Controller), you can adjust the volume and microphone levels once the keyboard is inserted into the PS4™ controller via the earphone jack. This is only applicable if a headset with microphone function is connected to the 3.5mm audio output jack.

WARRANTY INFORMATION

Worldwide, Rubber Road Ltd warrants to the consumer that this Numskull product will be free from material defects and manufacturing flaws for a period of one (1) year from the original date of purchase. Should the product appear to be defective during the warranty period, immediately contact Technical Support, who will indicate the procedure to follow. If the defect is confirmed, the product must be returned to its place of purchase (or any other location indicated by Technical Support).

Within the context of this warranty, the consumer's defective product will, at Technical Support's option, be either repaired or replaced. Where authorised by applicable law, the full liability of Rubber Road and its subsidiaries (including for indirect damages) is limited to the repair or replacement of the Numskull product. The consumer's legal rights with respect to legislation applicable to the sale of consumer goods are not affected by this warranty.

This warranty shall not apply: (1) if the product has been modified, opened, altered or has suffered damage as a result of inappropriate or abusive use, negligence, an accident, normal wear, or any other cause not related to a material defect or manufacturing flaw; (2) in the event of failure to comply with the instructions provided by Technical Support; (3) to software not published by Rubber Road, said software being subject to a specific warrant provided by its publisher.

"PS", "PlayStation", "PS4" and "△○×□" are registered trademarks of Sony Interactive Entertainment Inc. All rights reserved. Licensed for sale in Europe, Africa, Middle East, Russia, India and Oceania and for use exclusively with PlayStation®4. Manufactured by Rubber Road Ltd, United Kingdom, AL7 1HH (RubberRoad.co.uk).

Autorisé à la vente en Europe, en Afrique, au Moyen-Orient, en Russie, en Inde et en Océanie pour une utilisation exclusive avec le PlayStation®4. Fabriqué par Rubber Road Ltd, Royaume-Uni, AL7 1HH (RubberRoad.co.uk).

Autorizzato per la vendita in Europa, Africa, Medio Oriente, Russia, India e Oceania. Da utilizzare esclusivamente con PlayStation®4. Fabbricato da Rubber Road Ltd, Regno Unito, AL7 1HH (RubberRoad.co.uk).

Lizensiert für den Verkauf in Europa, Afrika, Naher Osten, Russland, Indien und Ozeanien und ausschließlich mit PlayStation®4. Hergestellt von Rubber Road Ltd, Großbritannien, AL7 1HH (RubberRoad.co.uk).

Licenciado para su venta en Europa, África, Oriente Medio, Rusia, India y Oceanía. Para uso exclusivo con PlayStation®4. Fabricado por Rubber Road Ltd, United Kingdom, AL7 1HH (RubberRoad.co.uk).

MADE IN JAPAN

Retain this information, colours and decorations may vary.

ENVIRONMENTAL PROTECTION RECOMMENDATION

At the end of its working life, this product should not be disposed of with standard household waste, but rather dropped off at a collection point for the disposal of Waste Electrical and Electronic Equipment (WEEE) or recycling.

This is confirmed by the symbol found on the product, user manual or packaging. Depending on their characteristics, the materials may be recycled. Through recycling and other forms of processing Waste Electrical and Electronic Equipment, you can make a significant contribution towards helping to protect the environment.

Please contact your local authorities for information on the collection point nearest you.

